

## Available Driving Distance [RANGE] & Tire Pressure Gauge [(---) FR/RR] Display


GL1800B/BD

Available driving distance is only displayed.

GL1800/D/DA

To select Available driving distance, Tire pressure gauge FR or RR, press **SET** button when the cursor is at the Available driving distance and Tire pressure gauge display.

Available driving distance [RANGE]

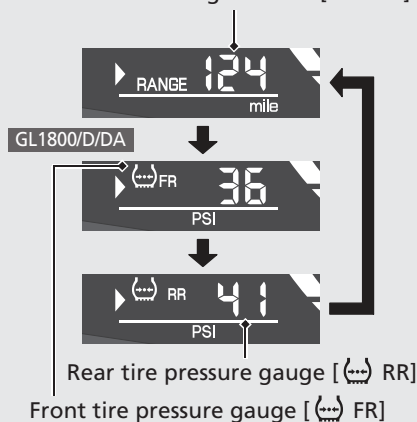

➡ Press **SET** button.

- 1 Press **SEL** button to move the cursor to the available driving distance and tire pressure gauge display.
- 2 Press **SET** button to select the available driving distance, front tire pressure gauge or rear tire pressure gauge.

## Available Driving Distance [RANGE]

Displays the estimated distance you can travel on the remaining fuel.

The indicated available driving distance is calculated based on the driving conditions, and the indicated figure may not always be the actual available distance.

- Initial display: “---” is displayed.
- When the calculated distance is below 3 mile (5 km) or the amount of remaining fuel is below 0.26 US gal (1.0 liters): “---” is displayed.

When “---” is displayed except for the above-mentioned cases, go to your dealer for service.