


Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

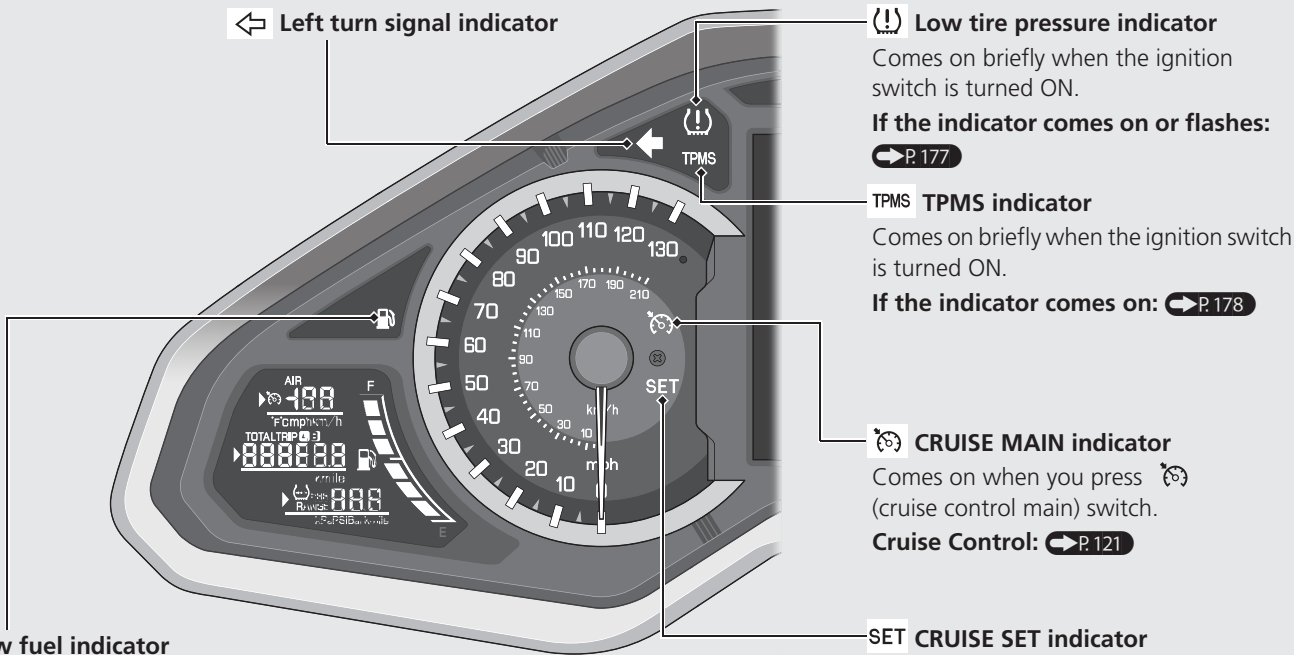

Low fuel indicator

- Comes on briefly when the ignition switch is turned ON.
- Comes on when there is only reserve fuel left in the fuel tank. Remaining fuel when low fuel indicator comes on: 0.92 US gal (3.5 liters)

If the indicator comes on:  P.125

Low tire pressure indicator

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on or flashes:


 P.177

TPMS TPMS indicator

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on:  P.178

CRUISE MAIN indicator

Comes on when you press  (cruise control main) switch.

Cruise Control:  P.121

SET CRUISE SET indicator

Comes on if you have set a speed for cruise control.

Cruise Control:  P.121