

Steering lock indicator


Comes on briefly while the steering lock is activating.

Steering lock:  P.55

Clutch temperature indicator


GL1800BD/D/DA

Comes on briefly when the ignition switch is turned ON.

If the indicator flashes on while riding:  P.177


Honda SMART Key indicator

Comes on briefly when the ignition switch is turned ON.

When the Honda SMART Key Indicator Flashes:  P.176


AIRBAG indicator GL1800DA

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on while riding:  P.178


Low oil pressure indicator

Comes on when the ignition switch is turned ON. Goes off when the engine starts.

If the indicator comes on while engine is running:  P.175

PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned ON.

If the indicator comes on while engine is running:  P.175

High beam indicator

