


# Riding Mode

You can change the riding mode. The following parameters change according to each riding mode.

- Engine output characteristic
- Brake feel
- **GL1800BD/D/DA** DCT characteristic
- **GL1800/D/DA** Torque Control operating level
- **GL1800/D/DA** Suspension damping characteristic

Riding mode indicator

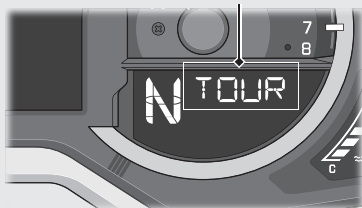

The following riding modes are available:

## **TOUR** mode:

TOUR mode provides an engine and braking feel and suspension damping characteristics optimized for comfortable riding in situations such as long distance touring.

## **SPORT** mode:

SPORT mode has a quicker and more powerful engine feel, harder braking feel, and harder suspension damping characteristics than with TOUR mode. For models equipped with DCT, shifting characteristics are oriented to maintain middle and high engine speeds.

## **ECON** mode:

ECON mode has a gentler engine feel than with TOUR mode. For models equipped with DCT, shifting characteristics are oriented to maintain low and middle engine speeds.

## **RAIN** mode:

RAIN mode has a gentler engine feel and softer suspension damping characteristics than with TOUR mode. For models equipped with DCT, shifting characteristics are gentler than those with TOUR mode.

## Selecting the Riding Mode

### **GL1800BD/D/DA**

Press the **MODE** button while the throttle is fully closed.

- ▶ The riding mode indicator blinks until the riding mode is changed.
- ▶ The riding mode does not change until the throttle is fully closed.
- ▶ Each time the ignition switch is turned to ON, the riding mode will automatically be set to **TOUR** mode.

