



Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual. (P. 228)

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- C** : Clean
- R** : Replace

Notes:

- *1 : At higher odometer reading, repeat at the frequency interval established here.
- *2 : Service more frequently when riding in unusually wet or dusty areas.
- *3 : Service more frequently when riding in rain or at full throttle.
- *4 : 50 STATE (meets California)
- *5 : Replacement requires mechanical skill.

Items	Frequency*1	Regular Replace	Refer to page										
				x 1,000 mi	0.6	4	8	12	16	20	24		
				x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line				I		I		I				
	Throttle Operation				I		I		I				165
	Air Cleaner*2						R						
	Crankcase Breather*3			C	C	C	C	C	C				166
	Spark Plug							R					153
	Valve Clearance								I				
	Engine Oil				R		R		R		1 Year		154
	Engine Oil Filter				R				R				155
	Clutch Oil Filter (GL1800BD/D/DA)				R				R				157
	Engine Idle Speed					I		I		I			
	Radiator Coolant*5					I		I		I	3 Years		158
	Cooling System					I		I		I			
	Secondary Air Supply System								I				
Evaporative Emission Control System*4								I					
Non-Emission-Related Items	Final Drive Oil										3 Years		159
	Brake Fluid*5				I	I	I	I	I	I	2 Years		160
	Brake Pads Wear				I	I	I	I	I	I			161
	Brake System					I		I		I			140
	Brake Light Switch					I		I		I			162
	Brake Lock Operation (GL1800BD/D/DA)				I	I	I	I	I	I			162
	Headlight Aim					I		I		I			167
	Clutch System (GL1800/B)					I		I		I			167
	Clutch Fluid*5 (GL1800/B)				I	I	I	I	I	I	2 Years		164
	Reverse Operation (GL1800/B)					I		I		I			
	Side Stand					I		I		I			163
	Suspension					I		I		I			
	Nuts, Bolts, Fasteners					I		I		I			
	Wheels/Tires					I		I		I			
	Steering Head Bearings					I		I		I			