

## Changing Engine Oil & Filter

Changing the oil and filter requires special tools. We recommend that you have your motorcycle serviced by your dealer.

Use a new Honda Genuine oil filter or equivalent specified for your model.

### NOTICE

Using the wrong oil filter can result in serious damage to the engine.

### GL1800D/DA Canada model

Check the engine oil with the Idling Stop system disabled.

1. If the engine is cold, idle the engine for 3 to 5 minutes.
2. Turn the ignition switch OFF and wait for 2 to 3 minutes.
3. Place your motorcycle on a firm, level surface.

4. **GL1800BD/D/DA** Place a drain pan under the drain bolt A, drain bolt B, drain bolt C and engine oil filter.  
**GL1800/B** Place a drain pan under the drain bolt and engine oil filter.
5. **GL1800BD/D/DA** Remove the oil fill cap, drain bolt A, drain bolt B, drain bolt C and sealing washers to drain the oil.  
**GL1800/B** Remove the oil fill cap, drain bolt and sealing washer to drain the oil.

