

Troubleshooting

Engine Will Not Start	P. 173
Overheating (High coolant temperature indicator is on)	P. 174
Warning Indicators On or Flashing	P. 175
Low Oil Pressure Indicator	P. 175
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 175
Combined ABS Indicator	P. 175
Torque Control Indicator	
GL1800/D/DA	P. 176
Honda SMART Key Indicator	P. 176
Clutch Temperature Indicator	
GL1800BD/D/DA	P. 177
Low Tire Pressure Indicator	P. 177
TPMS Indicator	P. 178
AIRBAG Indicator GL1800DA	P. 178
Other Warning Indications	P. 179
Fuel Gauge Failure Indication	P. 179
Handle Grip Heater Failure Indication	
GL1800/D/DA	P. 179
Seat Heaters Failure Indication	P. 180
Coolant Temperature Gauge Failure Indication	P. 180
If the “-” is Blinking in the Gear Position Indicator While Riding (GL1800BD/D/DA)	P. 181
When the Idling Stop System Does Not Operate Properly (GL1800D/DA Canada model) ..	P. 182
When the Honda SMART Key System Does Not Operate Properly	P. 184
Activating the Electrical System in an Emergency	P. 185
If the Saddlebags or Travel Trunk Won't Open ..	P. 187
Tire Puncture	P. 189
Audio System Trouble	P. 195
Electrical Trouble	P. 203
Battery Goes Dead	P. 203
Burned-out Light Bulb	P. 203
Blown Fuse	P. 205