
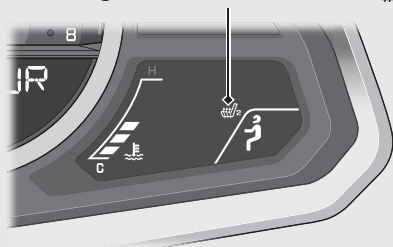


Passenger Seat Heater Indicator ()

GL1800/D/DA

Comes on when the passenger seat heater is on.


Passenger seat heater indicator ()



When the passenger seat heater indicator flashes, go to your dealer for service.

To operate the passenger seat heater:

 [P. 135](#)

If the passenger seat heater indicator blinks:  [P. 184](#)

Suspension Preload Indicator ()

GL1800/D/DA

Shows selected rear suspension spring preload.

The indicator flashes while transitioning between setting modes.

When the indicator flashes except for the above mentioned cases, go to your dealer for service.

Electrical Adjustable Suspension:

 [P. 172](#)