

GL1800/B

Headlight dimmer switch

- ▲☰ : High beam
- ▼☰ : Low beam
- ☰PASS : Flashes the high beam headlight.

VOL lever

Push up or down to adjust the audio system volume.
 ➔ P.71

(Voice control) switch

- Press to receive, reject or end a call. ➔ P.104
- Starts Siri if Apple CarPlay is available. ➔ P.103

Horn button

4-way key/ENT switch

- Press the 4-way key switch in the ▲ / ▼ / ◀ / ▶ directions to select the available choices.
- Press ENT switch to set your selection. ➔ P.24

Windscreen adjusting lever

Push up or down to adjust the windscreen height. ➔ P.136

(Home) switch

Press to return to the Home screen. ➔ P.24

(Back) switch

Press to return to the previous screen. ➔ P.24

(Source/Private Mode) switch

- Press to change the audio mode. ➔ P.71
- Press and hold to enable/disable the private mode. ➔ P.90

R Reverse mode switch Except GL1800B USA model

Press to enter the reverse mode. ➔ P.119

Reverse button Except GL1800B USA model

Turn signal switch

While pressing the switch, your motorcycle will back up in the reverse mode. ➔ P.119

- The turn signal will automatically stop when you complete the turn.
- When used for a lane change, the turn signal automatically stops after 7 seconds or after riding 131 yards (120 m).
- ▶ You can manually cancel the turn signal by pressing the switch in.
- ▶ In some cases, the timing at which the turn signal stops is changed.
- ▶ Always use the recommended tires to ensure correct automatic cancellation operation.

To enable or disable the turn signal automatic cancellation: ➔ P.28

