

## Comfort & Convenience Adjustment *(Continued)*

### Seat Heater **GL1800/D/DA**

This motorcycle is equipped with the seat heaters that warms up the rider's seat and passenger's seat for comfortable riding on a cold day.

To operate, adjust the seat heater buttons with the engine started.


Do not use the seat heaters with the engine at idle for a long time. It may result in a low (or dead) battery.

### Rider Seat Heater Button

The rider seat heater button is located on the center panel.

The selected heater level is changed each time the seat heater button is pressed.

#### Rider seat heater indicator

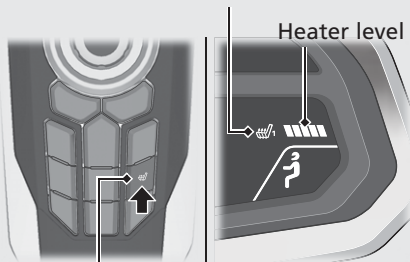

Rider seat heater button

### To Operate the Rider Seat Heater

- 1 Start the engine. P.112
- 2 Press the rider seat heater button. The rider seat heater is on.
- 3 Select the heater level by pressing the rider seat heater button.
  - ▶ Do not leave the seat heater in the high position for a long time on a warm day.

### To Turn Off the Rider Seat Heater


Press and hold the rider seat button until rider seat heater indicator and heater level display goes off.

Maintains the selected level when the ignition switch is turned OFF and then back ON.

Do not use the seat heaters with the engine at idle for a long time. It may result in a low (or dead) battery.

Do not use the seat heater when the seat is torn, cut or damaged as you can get burned.

Do not apply excessive stress to the seat, e.g. by securing articles to it with tie-down straps during transportation.

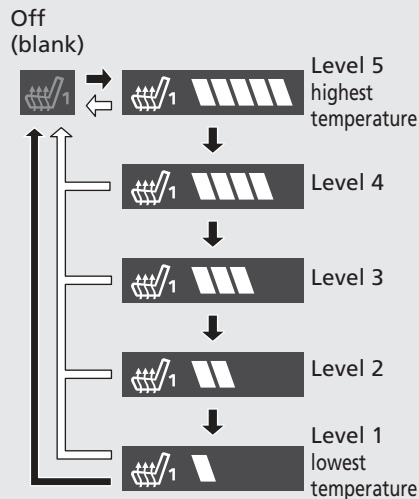

: Press the rider seat heater button

: Press and hold the rider seat heater button