


- Remove the oil filter with a filter wrench and let the remaining oil drain out. Make sure the prior seal is not stuck to the engine.
► Discard the oil and oil filter at an approved recycling center.

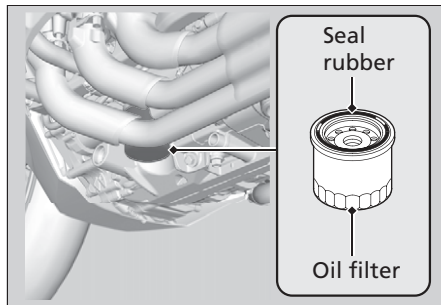

- Apply a thin coat of engine oil to the rubber seal of a new oil filter.
- Install the new oil filter and tighten.

Torque: 19 lbf-ft (26 N·m, 2.7 kgf·m)

- GL1800BD/D/DA** Install new sealing washers onto the drain bolt A, drain bolt B and drain bolt C. Tighten the drain bolts to the specified torque.
GL1800/B Install new sealing washer onto the drain bolt. Tighten the drain bolt to the specified torque.

Torque:

GL1800BD/D/DA:

Drain bolt A:

22 lbf-ft (30 N·m, 3.1 kgf·m)

Drain bolt B:

22 lbf-ft (30 N·m, 3.1 kgf·m)

Drain bolt C:

22 lbf-ft (30 N·m, 3.1 kgf·m)

GL1800/B:

Drain bolt:

22 lbf-ft (30 N·m, 3.1 kgf·m)

- Fill the crankcase with the recommended oil (► P. 148, 237, 239) and install the oil fill cap.

Required oil:

GL1800BD/D/DA:

When changing oil & engine oil filter:

4.9 US qt (4.6 liters)

When changing oil only:

4.6 US qt (4.4 liters)

GL1800/B:

When changing oil & engine oil filter:

3.9 US qt (3.7 liters)

When changing oil only:

3.7 US qt (3.5 liters)

- Check the oil level. ► P. 158
- Check that there are no oil leaks.