

## Changing Clutch Oil Filter


GL1800BD/D/DA

Use a new Honda Genuine clutch oil filter or equivalent specified for your model.

### NOTICE

Using the wrong clutch oil filter can result in serious damage to the transmission.

1. Follow the steps 1- 6 of Changing Engine Oil & Filter. ► P. 159
2. Place a drain pan under the clutch oil filter cover.
3. Remove the clutch oil filter cover, spring and clutch oil filter by removing the oil filter cover bolts.
  - Discard the oil and clutch oil filter at an approved recycling center.

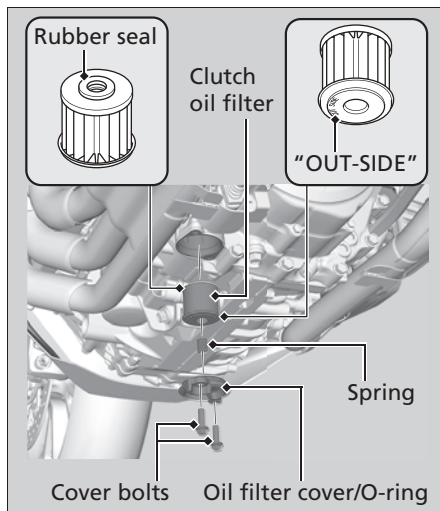

4. Install a new clutch oil filter with the rubber seal facing in, toward the engine. You will see "OUT-SIDE" mark on the clutch oil filter body, toward the filter cover.
5. Replace the O-ring and apply a thin coat of engine oil to new O-ring before installing it.
6. Install the spring and the clutch oil filter cover.

7. Install the clutch oil filter cover bolts and tighten.
8. Apply a thin coat of engine oil to the rubber seal of a new engine oil filter.
  - P. 160
9. Install the new engine oil filter and tighten.

**Torque:** 19 lbf-ft (26 N·m, 2.7 kgf·m)

10. Replace the sealing washers with new ones. Install the drain bolts and tighten them. ► P. 159

**Torque:** 22 lbf-ft (30 N·m, 3.1 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 148, 237, 239) and install the oil fill cap.

### Required oil:

**When changing oil, engine oil filter & clutch oil filter:**

4.9 US qt (4.6 liters)

12. Check the oil level. (► P. 158)
13. Check that there are no oil leaks.