

## Front Wheel

### Removal


**1.** **GL1800/D/DA**

Place your motorcycle on its center stand on a firm, level surface.


**GL1800B/BD**

Place your motorcycle on a firm, level surface.

**2.** Remove the bolts, and then remove the front fender A forward.

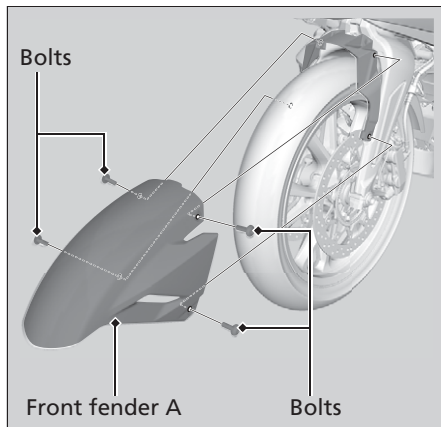

**3.** Cover both sides of the front wheel and brake calipers with protective tape or cloth.

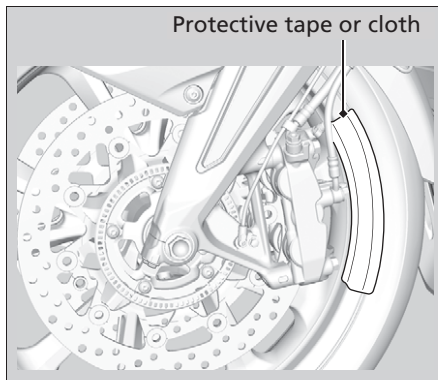

**4.** Remove the bolt and wheel speed sensor.  
**5.** On the left side, remove the mounting bolts and remove the brake caliper.

