
System Control

To turn the Navi voice on with the Navigation System turned of f — push the NAVI button.

To turn the Navi voice off with the Navigation System turned on - push and hold the NAVI button.

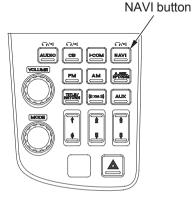



Switch Output

When the navigation voice guidance is turned on, you can switch its output between Speaker and Headset (optional equipment).

• Push the NAVI button switches output.

