

# Maintenance Schedule

		FREQUENCY		ODOMETER READING (Note 1)							Refer to page
				× 1,000 mi	4	8	12	16	20	24	
ITEM		NOTE	× 1,000 km	6.4	12.8	19.2	25.6	32.0	38.4		
EMISSIONS-RELATED ITEMS	*	FUEL LINE			I		I		I	—	
	*	THROTTLE OPERATION			I		I		I	—	
	*	AIR CLEANER	2			R			R	—	
		CRANKCASE BREATHER	3		C	C	C	C	C	C	185
		SPARK PLUGS			EVERY 16,000 mi (25,600 km) R						190
	*	VALVE CLEARANCE	4		EVERY 32,000 mi (51,200 km) I						—
		ENGINE OIL	6		R		R		R		175
		ENGINE OIL FILTER			R		R		R		179
	*	ENGINE IDLE SPEED			I		I		I		—
		RADIATOR COOLANT	5			I		I		R	182
	*	COOLING SYSTEM				I		I		I	—
	*	SECONDARY AIR SUPPLY SYSTEM				I		I		I	—
*	EVAPORATIVE EMISSION CONTROL SYSTEM					I			I	—	

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual ([page 270](#)).