

Instruments & Controls

This section shows the location of all gauges, indicators, and controls you would normally use before or while riding your motorcycle.

The items listed on this page are described in this section. Instructions for other components are presented in other sections of this manual where they will be most useful.

Operation Component Locations	12
Gauges & Indicators.....	15
Multi Information Display	21
Opening/Ending Ceremony.....	22
On/Off-Opening/Ending Ceremony.....	23
Special Message for Opening/Ending Ceremony	24
Odometer/Tripmeter.....	26
Switch the Day Mode Display and Night Mode Display	27
Display Illumination Adjustment.....	28
Digital Clock.....	30
Air Temperature Meter.....	31
Travel Trunk & Saddlebags Open Indicator	32
Display Type Selection	33
Changing the Information Display.....	34
Controls & Features	35
Ignition Switch.....	35
Engine Stop Switch.....	36
Start/Reverse Button	37
Reverse (RVS) Switch.....	37
Cruise Control Switches	37
Headlight Dimmer Switch	38
Turn Signal Switch.....	38
Horn Button	38
Audio Control Switches.....	38
Hazard Switch.....	39
Headlight Beam Adjustment Switch.....	40
Rear Suspension Spring Pre-load Adjustment Switch.....	41
Ventilation Controls	41
Windscreen Height Adjustment	41