
(Models equipped with Navigation System) To adjust the brightness of the display:

Push the DIM button once. The display shows "Dimmer/Day" at Day mode, while it shows "Dimmer/Night" at Night mode.

- To brighten the display push the TRIP button (+).
- To darken the display push the INFO button (–). (The brighter and darker ranges each have six steps.)
- To set the selected step push the DISP button.

To switch the display between "Dimmer/Day" and "Dimmer/Night", select the display between Day mode and Night mode (page 27) and push the DIM button.

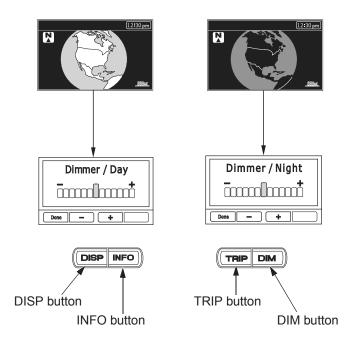

When approximately 5 seconds pass without operating a button, the display automatically returns to the previous display.

The display can become dark when the display is very hot. If it does not restore the original brightness, consult your dealer.