
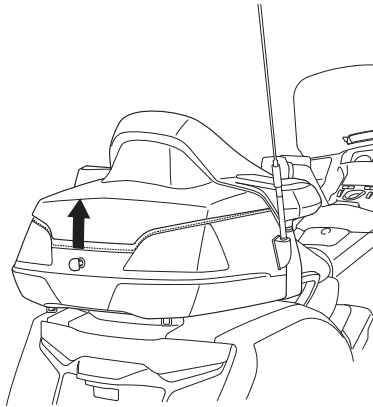


# Cargo Compartment

---

- To open the trunk, push and hold the trunk release button for approximately one second.


trunk release button

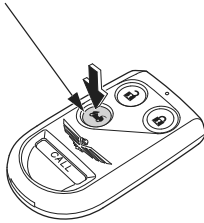


## *Call Mode*

The call mode is provided to let you locate your motorcycle when it is parked in a large lot.

Push and hold the CALL button, the horn will sound and the turn signal lights will blink two times.

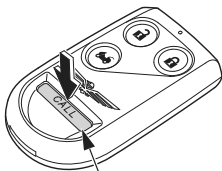

CALL button

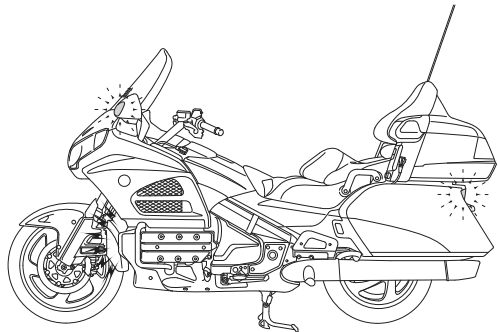

When the ignition switch is in the ON or ACC position:

- You can lock and unlock the compartments.
- The trunk release button will not operate.
- The call mode will not operate.