

# Comfort & Convenience Adjustment

## Seat Heater



The seat heater warms up the driver's seat (and the passenger's seat) for comfortable riding on a cold day.


The front seat heater switch is located on the left side of the ignition switch.

The rear seat heater switch is located under the left trunk side pocket.

To operate, adjust the seat heater switch with the engine started.


The front and rear seat heater switches have 6 positions (OFF, 1, 2, 3, 4, MAX).

### LEFT SIDE OF THE IGNITION SWITCH

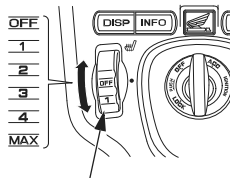

front seat heater switch

### UNDER THE LEFT TRUNK SIDE POCKET

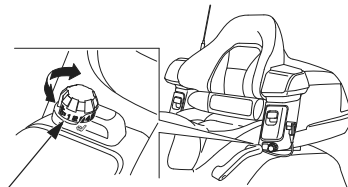

rear seat heater switch

To warm up the seat heater, turn the seat heater switch toward the MAX position.

To cool down the seat heater, turn the seat heater switch toward the OFF position.

Do not leave the seat heater in the high position for a long time on a warm day. Do not use the seat heater with the engine at idle for a long time. It may result in a low (or dead) battery.

Do not use the seat heater when the seat is torn, cut or damaged as you can get burned.

Do not apply excessive stress to the seat, e.g. by securing articles to it with tie-down straps during transportation.