



MODE Knob/Button Function

(Models not equipped with Navigation System)

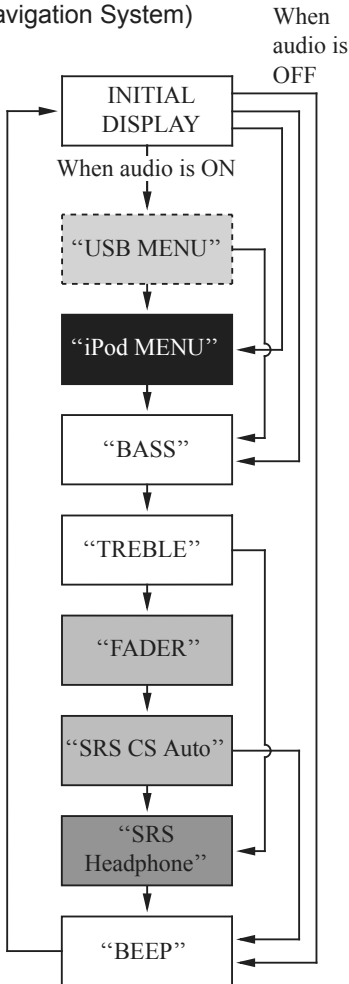

(Models equipped with Navigation System)

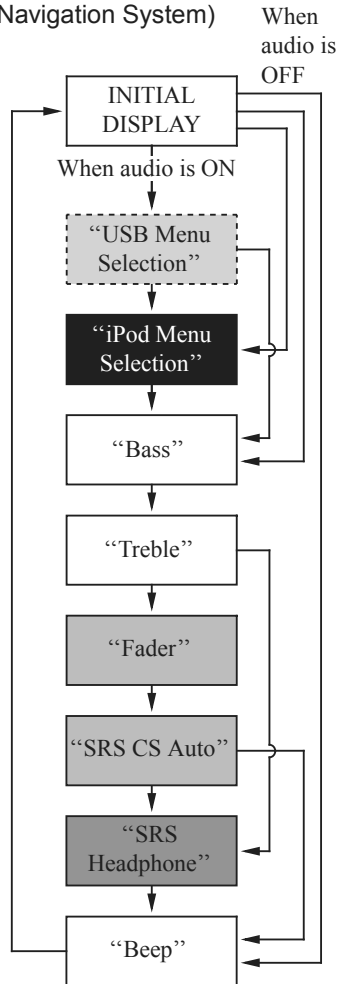

• —————> Push the MODE Knob/Button

- When the speaker is used
- When the headset is used

- When USB flash drive is used
- When iPod® is used