Operating the XM[®] Radio

To listen to XM^{\circledast} Radio, turn the ignition switch to the ON or ACCESSORY position, and push the XM^{\circledast} button. The last channel you listened to will show in the display.

Push the XM[®] button to switch to XM1/XM2/XM3.



XM[®] button

XM Radio Display Messages

Display Message	Status
'LOADING'	XM [®] is loading the audio or program information.
'OFF AIR'	The channel currently selected is no longer broadcasting.
'UPDATING'	The encryption code is being updated. Wait until the encryption code is fully updated. Channels 0 and 1 should still work normally.
'NO XM SIGNAL'	The signal is currently too weak. Move the vehicle to an area away from tall buildings, and with an unobstructed view of the southern horizon.
· ,	The selected channel number does not exist, or is not part of your subscription, or this channel has no artist or title information at this time.
'CHECK XM ANTENNA'	There is a problem with the XM [®] antenna. Please consult your dealer.

122 Audio Systems