

Maintenance Schedule

ITEMS		FREQUENCY		ODOMETER READING (Note 1)							Refer to page
			NOTE	x1,000 mi	4	8	12	16	20	24	
				x1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	
NON-EMISSIONS-RELATED ITEMS		FINAL DRIVE OIL								R	186
		BRAKE FLUID	5				R			R	197
		BRAKE PADS WEAR									199
		BRAKE SYSTEM									200
	*	BRAKE LIGHT SWITCH									-
	*	HEADLIGHT AIM									-
		CLUTCH SYSTEM									188
		CLUTCH FLUID	5				R			R	189
	*	REVERSE OPERATION									-
		SIDE STAND									208
	*	SUSPENSION									-
	*	NUTS, BOLTS, FASTENERS									-
	**	WHEELS/TIRES									-
	**	STEERING HEAD BEARINGS									-

* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 270).

** In the interest of safety, we recommend these items be serviced only by your dealer.