

# Cover Removal

## Engine Side Cover Removal

Refer to *Safety Precautions* on [page 154](#).

The left engine side cover must be removed for coolant maintenance.  
The right engine side cover must be removed for engine oil and rear brake fluid maintenance.

### NOTICE

*Failure to use extreme care removing or installing the engine side covers may damage the engine side cover prongs.*

### Removal

1. Carefully pull the rear of the engine side cover out until the prongs are clear of their securing grommets.
2. Remove the engine side cover backward.

### Installation

- Installation can be done in the reverse order of removal.

### LEFT SIDE

