

Never use stale or contaminated gasoline or an oil/gasoline mixture. Avoid getting dirt, dust, or water in the fuel tank.

Fuel Capacity


Fuel tank capacity, including reserve:

6.6 US gal (25 ℓ)

The tank should be refilled as soon as possible when the fuel gauge needle enters the red band.

Refueling Procedure

Refer to *Safety Precautions* on [page 154](#).

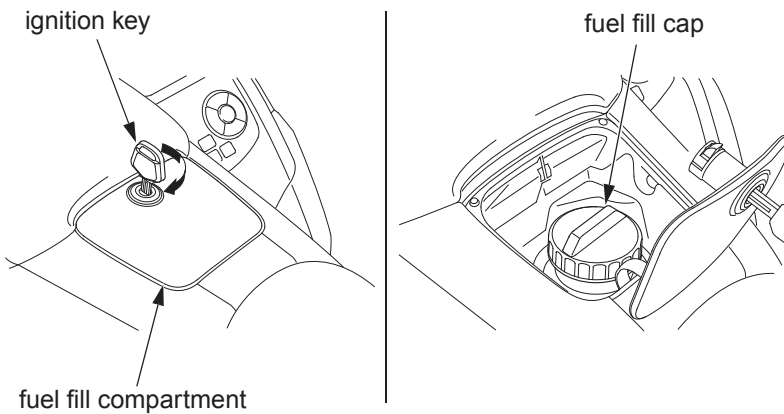

1. Insert the ignition key in the fuel fill compartment and turn it clockwise.
2. Open the fuel fill compartment.
3. Turn the fuel fill cap counterclockwise and remove it.

(cont'd)