


# Suspension

The rear suspension spring pre-load adjustment system has 26 positions (from 0 to 25) for different road or riding conditions. (Standard position is 0.)

## Adjustment

1. Place the motorcycle on its center stand on a firm, level surface. To prevent discharging the battery, make sure the audio system and other electrical accessories are off.
2. Turn the ignition switch to ON or ACC.
3. Push the DOWN or UP side of rear suspension spring pre-load adjustment switch until the desired pre-load is reached.

 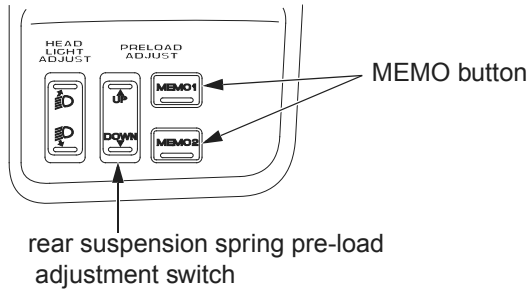


## To increase (HIGH)

(Models not equipped with Navigation System)



(Models equipped with Navigation System)



## To decrease (LOW)

(Models not equipped with Navigation System)



(Models equipped with Navigation System)

