

# Gauges & Indicators

---



turn signal indicator (green)

Flashes when either turn signal operates.

---



reverse system indicator (amber)

Lights when the reverse system is engaged.

---



neutral indicator (green)

Lights when the transmission is in neutral.

---



overdrive indicator (amber)

Lights when the transmission is in overdrive (5th gear).

---



low oil pressure indicator (red)

Lights when engine oil pressure is low enough to cause engine damage. If the low oil pressure indicator lights during operation, pull safely to the side of the road. See page 243 for instructions and cautions. *Lamp Check.*