

Controls & Features

Rear Suspension Spring Pre-load Adjustment Switch

The rear suspension spring pre-load adjustment switch is used to adjust the rear suspension to suit your load and riding conditions. For instructions on when and how to adjust the rear suspension, see *Rear Suspension Spring Pre-load Adjustment*, page 192.

Ventilation Controls

The windscreen ventilation louver is used to direct the flow of fresh air (page 63).

The foot warmer ventilation louvers are used to direct the flow of warm air (page 64).

Windscreen Height Adjustment

The windscreen height adjustment levers are used to raise or lower your windscreen to suit your riding preference. For instructions, see page 62.