


MODE Knob/Button Function


(Models not equipped with Navigation System)

When audio is OFF

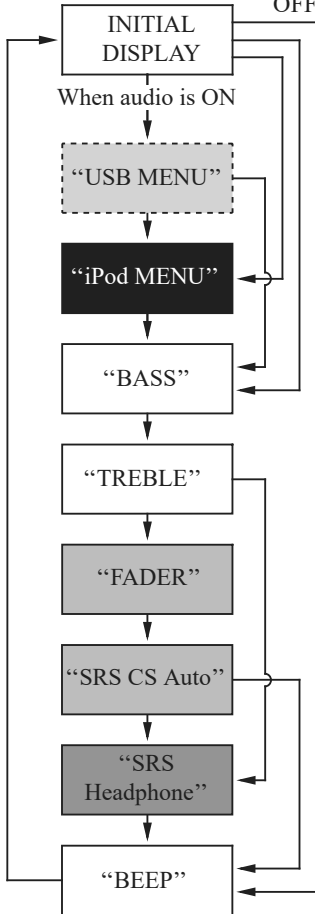

(Models equipped with Navigation System)

When audio is OFF

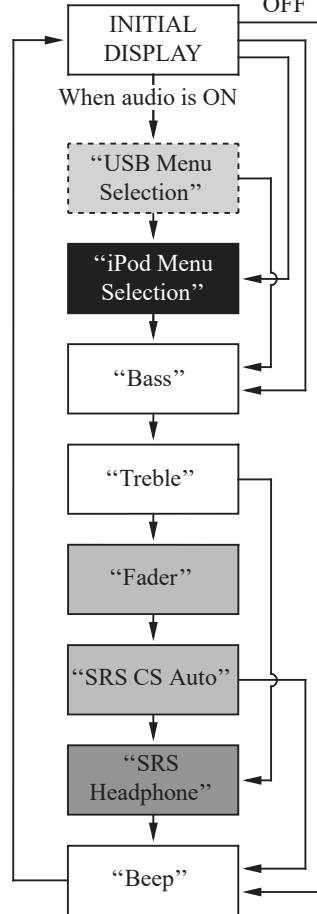

• —————> Push the MODE Knob/Button

• When the speaker is used

• When the headset is used

• When USB flash drive is used

• When iPod® is used