

# Maintenance Schedule

		FREQUENCY		ODOMETER READING (Note 1)							
			NOTE	×1,000 mi	4	8	12	16	20	24	Refer to page
ITEMS				×1,000 km	6.4	12.8	19.2	25.6	32.0	38.4	
EMISSIONS-RELATED ITEMS	* FUEL LINE					I		I		I	-
	* THROTTLE OPERATION					I		I		I	-
	* AIR CLEANER	2					R			R	-
	CRANKCASE BREATHER	3			C	C	C	C	C	C	185
	SPARK PLUGS			EVERY 16,000 mi (25,600 km) R							190
	* VALVE CLEARANCE	4		EVERY 32,000 mi (51,200 km) I							-
	ENGINE OIL	6			R		R		R		175
	ENGINE OIL FILTER				R		R		R		179
	* ENGINE IDLE SPEED				I		I		I		-
	RADIATOR COOLANT	5				I		I		R	182
	* COOLING SYSTEM					I		I		I	-
	* SECONDARY AIR SUPPLY SYSTEM					I		I		I	-
	* EVAPORATIVE EMISSION CONTROL SYSTEM						I			I	-

\* Should be serviced by your dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 270).