



## MODE Knob/Button Function


(Models not equipped with Navigation System)

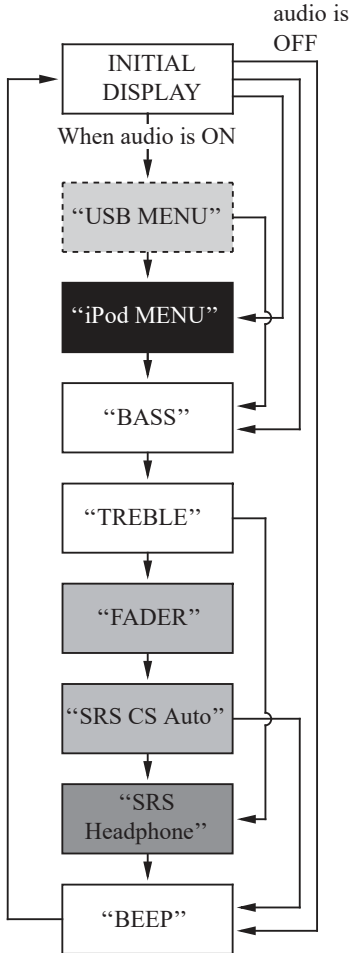

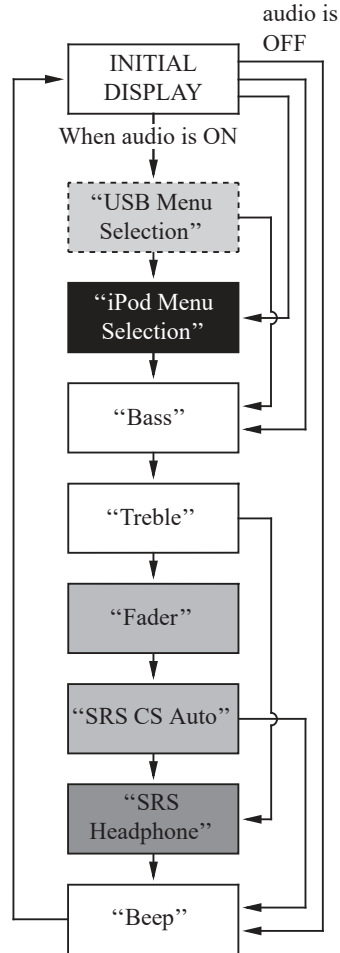

(Models equipped with Navigation System)




• —————> Push the MODE Knob/Button

•  When the speaker is used

•  When the headset is used

•  When USB flash drive is used

•  When iPod® is used