


iPod®/USB Flash Drive

Illustrations are models equipped with Navigation System. Functions and flows of models not equipped with Navigation System are same as models equipped with Navigation System.

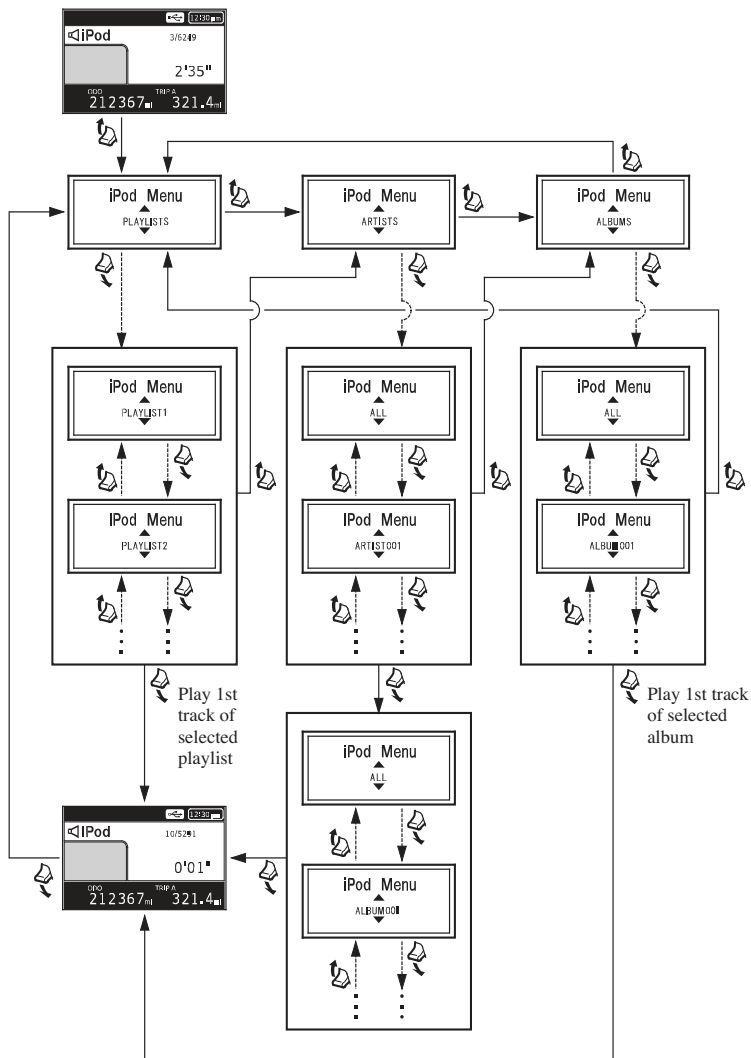

Push the TUNE/CH lever: 

Push and hold the TUNE/CH lever: 

Push the TUNE/CH lever up: 

Push the TUNE/CH lever down: 