

Navigation System

Navi Volume Control


To select the volume control, push the **VOLUME** knob/button until “NAVI VOL” is displayed (page 98). Then, within the 5 seconds, change the navigation volume control.

To make the Navi volume louder than the audio volume – push the **VOLUME** lever up or turn the **VOLUME** knob/button clockwise.

To make the Navi volume quieter than the audio volume – push the **VOLUME** lever down or turn the **VOLUME** knob/button counterclockwise.

To increase or decrease the volume rapidly – push the **VOLUME** lever up or down and hold it down.

(NAVI VOLUME level ranges: from 5 down to -5)

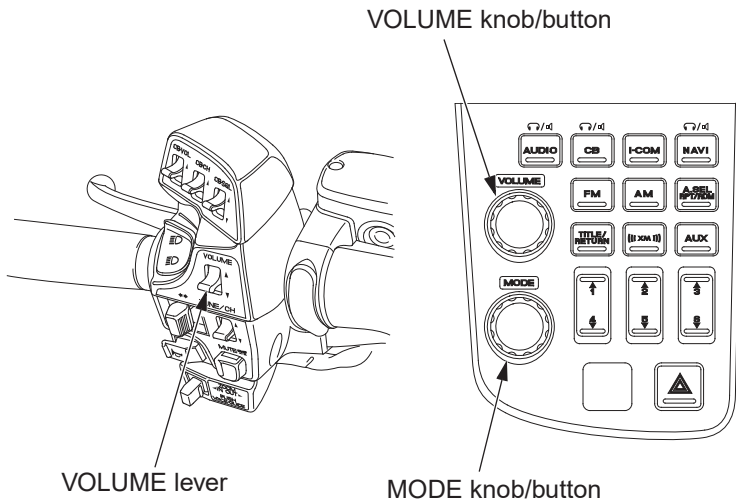

NAVI Volume

