

# Suspension

---

## Storing Pre-load Into the Memory


You may store two selected adjustments in “MEMO 1” or “MEMO 2”.

1. Adjust the pre-load to the desired position.
2. Push and hold the MEMO 1 or MEMO 2 button until “STORE MEMO 1” or “STORE MEMO 2” blinks in the multi information display. When the blinking stops, the current position is stored in memory.


### Storing

### Stored

(Models not equipped with Navigation System)

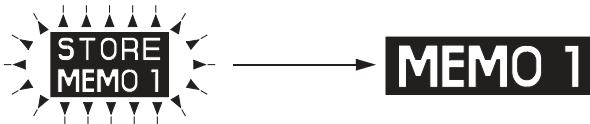

(Models equipped with Navigation System)

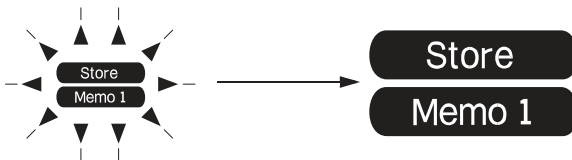

## Selecting the Memorized Position

- Push the MEMO (1 or 2) button to select the memorized position. “CALL MEMO 1” or “CALL MEMO 2” will blink. When the position is selected, “MEMO 1” or “MEMO 2” will turn on.


### Calling

### Called

(Models not equipped with Navigation System)



(Models equipped with Navigation System)

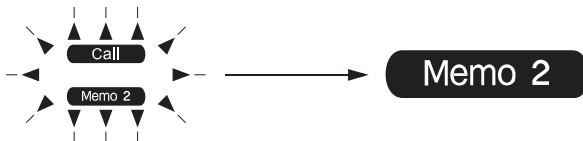

Pushing the rear suspension spring pre-load adjustment switch or the MEMO (1 or 2) button while selecting a memorized position will cancel the calling procedure.