

## If a Fuse Blows

---

### *Main Fuse Access:*

4. Check the two main fuses (A & B) to see if they are blown.  
To replace main fuses (A & B), see your dealer for this service.

### *Speed Limiter Fuse Access:*

5. Check the speed limiter (reverse system) fuse to see if it's blown, see your dealer for this service.

### *Circuit Fuses Access:*

6. To check or replace a circuit fuse, pull the old fuse out of its retaining clips with the fuse remover. Look for a burned wire inside the fuse. If the fuse is blown, replace it with a spare fuse of the same rating.

If you do not have a replacement fuse with the proper rating for the circuit, install one with a lower rating.

|               |
|---------------|
| <b>NOTICE</b> |
|---------------|

*Replacing a fuse with one that has a higher rating greatly increases the chance of damage to the electrical system.*

### *External Amplifier Fuse Access:*

7. To replace the external amplifier fuse, see your dealer for this service.

(cont'd)