


Suspension Preload GL1800/D/DA

You can automatically adjust the rear suspension spring preload according to the riding conditions by selecting from the four pre-programmed settings.

The rear suspension spring preload adjustment can be changed only when your motorcycle is stopped.

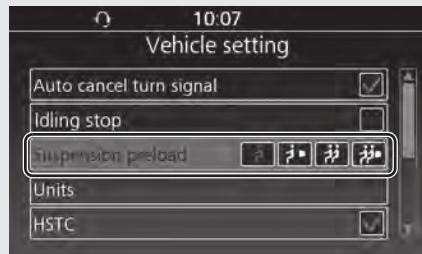


- 1 Select [Suspension preload], and then press or **ENT** switch.
- 2 Rotate or press **▲ / ▼** on the 4-way key switch to select the setting according to the riding conditions.

The rear suspension adjustment provides the following settings.

Status icon	Riding condition
	Rider only (Minimum preload)
	Rider and luggage
	Rider and passenger
	Rider, passenger and luggage (Maximum preload)

- 3 Press or **ENT** switch to set your selection.
 - ▶ The selected status icon on the INFO 3 display flashes while transitioning between setting modes.The status icon comes on when the suspension adjustment is completed.

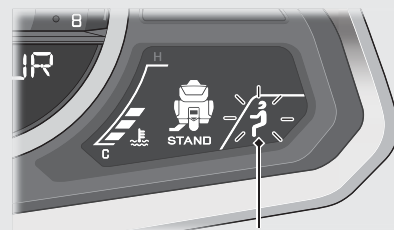

Status icon

- 4 Return to the previous screen or the Home screen. **P.24**

Electrical Adjustable Suspension:

P.172