




## To Change the Unit for Tire Pressure Gauge [Air pressure] GL1800/D/DA

- 1 Select [Units], and then press  or **ENT** switch.
- 2 Rotate  or press  $\blacktriangle$  /  $\blacktriangledown$  on the 4-way key switch to select [Air pressure].
- 3 With [Air pressure] selected, press  or **ENT** switch to select the unit.

**Selectable unit:** PSI or kPa

**Default:** PSI (USA model) / kPa (Canada model)

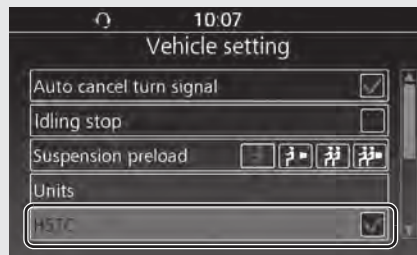
- 4 Return to the previous screen or the Home screen.  **P.24**



The unit for air pressure gauge [Air Pressure] is changed in the INFO 1 display.

## HSTC (Honda Selectable Torque Control) GL1800/D/DA

GL1800/D/DA

You can enable/disable the HSTC function.



- 1 Select [HSTC], and then press  or **ENT** switch to select (enable) or deselect (disable) the function.
- 2 Return to the previous screen or the Home screen.  **P.24**

 

**Default:** On (selected)

## Honda Selectable Torque Control (Torque Control): **P.122**

## Auto Dimmer Meter Illumination

You can select the backlight brightness.



- 1 Select [Auto dimmer meter illumination], and then press  or **ENT** switch.
- 2 Rotate  or press  $\blacktriangle$  /  $\blacktriangledown$  on the 4-way key switch to select [AUTO] (Auto adjustment) or your preferred level.

