

## Instruments *(Continued)*


GL1800/B

Indication	Gear position
I	1st gear
II	2nd gear
III	3rd gear
IV	4th gear
V	5th gear
VI	6th gear
N	Neutral
R	Reverse*
-	Shifting failure

\* Except GL1800B USA model

" - " flashes when the transmission is not shifted properly.

### Riding Mode Indicator

Refer to "Riding Mode"  P.120

### D (AT MODE) Indicator ( )

GL1800BD/D/DA

Comes on when AT MODE is selected.

 P.116

### Idling Stop OFF Indicator ( )

GL1800D/DA Canada model only

Comes on briefly when the ignition switch is turned ON.

Comes on when the Idling Stop system is off.

Idling Stop system:  P.61

### Walking Speed Mode Indicator ( )

GL1800BD/D/DA

Comes on when in Walking Speed mode.

Walking Speed Mode:  P.117