


INFO 3 Display

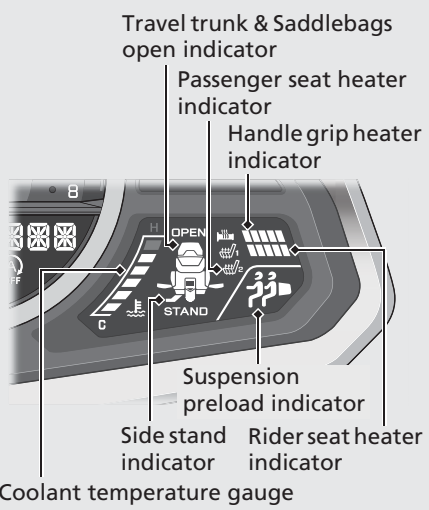


INFO 3 display contains the following:

- Coolant temperature gauge (🌡️) → P. 41
- Travel trunk **GL1800/D/DA** & Saddlebags open indicator → P. 41
- Side stand indicator → P. 42
- Handle grip heater indicator (👉) → P. 42

- **GL1800/D/DA**
Rider seat heater indicator (👉) → P. 42
- **GL1800/D/DA**
Passenger seat heater indicator (👉) → P. 43
- **GL1800/D/DA**
Suspension preload indicator (👉) → P. 43

Coolant Temperature Gauge (🌡️)

When the coolant is over the specified temperature, the 6th (H) segment flashes and the high coolant temperature indicator comes on.

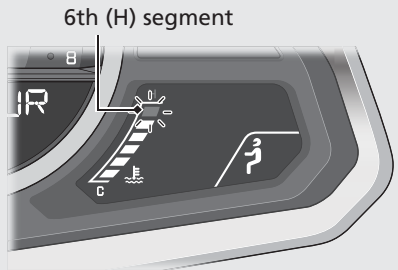


- If the 6th (H) segment flashes while riding: → P. 178
- If the all segments flashes: → P. 184

Travel Trunk **GL1800/D/DA** & Saddlebags Open Indicator

The segment(s) of open component(s) flashes with the "OPEN" indicator when your motorcycle's travel trunk and/or saddlebags are open.

Travel trunk open **GL1800/D/DA**

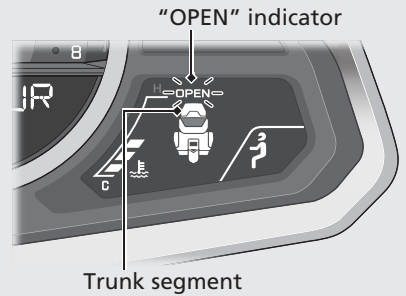

Saddlebag open

