

Switches *(Continued)*

Right handlebar


GL1800BD/D/DA

A/M switch

Shifts between AT MODE and MT MODE. ➔ P.116

Hazard switch


Switchable when the ignition switch is ON. Can be turned off regardless of the ignition switch position.


- ▶ The signals continue flashing with the ignition switch in OFF or  (Lock) after the hazard switch is on.

MODE button

Changes the riding mode. ➔ P.120

Engine stop switch/ Start button

Should normally remain in the  (Run) position.

- ▶ In an emergency, switch to the  (Stop) position to stop the engine.
- ▶ Press the start button to start the engine. ➔ P.112

Idling stop button

Canada model only

- ▶ Press to switch the Idling Stop system on or off while engine is running. ➔ P.61

N-D switch

To shift between Neutral and AT MODE. ➔ P.116

Cruise control lever

Push up or down to set the speed or adjust the set speed. ➔ P.123

Cruise control main switch

Press to activate the cruise control system. ➔ P.123

