

▶ **GL1800B/BD** On models equipped with the front speakers only, setting the fader level to a negative level means the output sound gradually becomes smaller.

▶ The fader setting does not affect the headsets output.

- Return to the previous screen or the Home screen. P.24

**Available setting range:** Level -7 to +7  
**Default:** Level 0

### Auto Volume (Speaker)

Selects the volume setting to automatically increase volume from the speakers as the speed of the motorcycle increases.




- Select [Auto volume (Speaker)], and then press or **[ENT]** switch.
- Rotate or press / on the 4-way key switch, and then press or **[ENT]** switch to set your selection.
- Return to the previous screen or the Home screen. P.24

**Available settings:** [OFF]/[LOW]/[MID]/[HIGH]

**Default:** [OFF]

### Auto Volume (Headset)

Selects the volume setting to automatically increase volume from the headsets as the speed of the motorcycle increases.

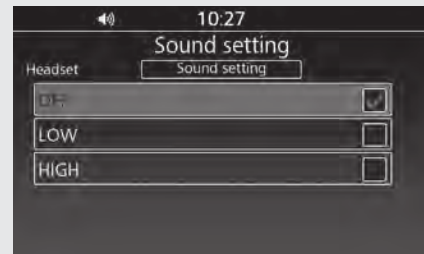

- Select [Auto volume (Headset)], and then press or **[ENT]** switch.
- Rotate or press / on the 4-way key switch, and then press or **[ENT]** switch to set your selection.
- Return to the previous screen or the Home screen. P.24

**Available settings:** [OFF]/[LOW]/[HIGH]

**Default:** [OFF]