






## Mic. Level

Adjusts the microphone volume.



- 1 Select [Mic. level], and then press  or **ENT** switch.
- 2 Rotate  or press  /  on the 4-way key switch to select your preferred level.
- 3 Return to the previous screen or the Home screen.  P.24

**Available setting range:** Level -7 to +7

**Default:** Level 0