


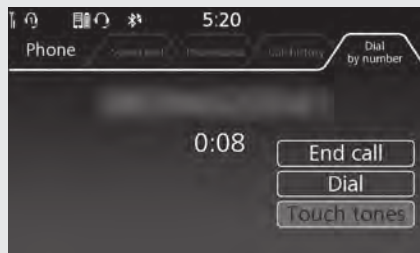


## ■ Sending DTMF tones during a call

You can send DTMF (Dual Tone Multi Frequency) tones during a call.

This is useful when you call a menu-driven phone system.

This function is disabled while the motorcycle is in motion.



- 1 During a call, select [Touch tones], and then press  or **ENT** switch.
- 2 To send a DTMF tone, select a number key, and then press  or **ENT** switch.
  - ▶ To return to the previous screen, select [Quit] and press  or **ENT** switch.