


### Cleaning the Crankcase Breather

1. Remove the left fog light cover. ➤ P. 155
2. Remove the left cylinder head side cover. ➤ P. 154
3. Place a suitable container under the crankcase breather tube.
4. Remove the crankcase breather tube plug from the tube.
5. Drain deposits into a suitable container.
6. Install the crankcase breather tube plug.
7. Install the parts in the reverse order of removal.

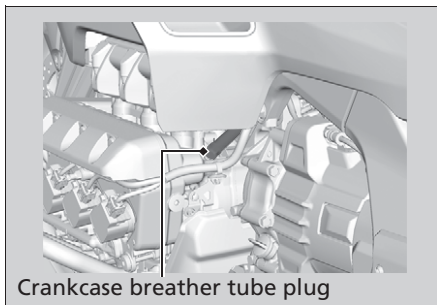

Crankcase breather tube plug