

## Front Wheel

### Removal


1. **GL1800/D/DA**

Place your motorcycle on its center stand on a firm, level surface.


**GL1800B/BD**

Place your motorcycle on a firm, level surface.

2. Remove the bolts, and then remove the front fender A forward.

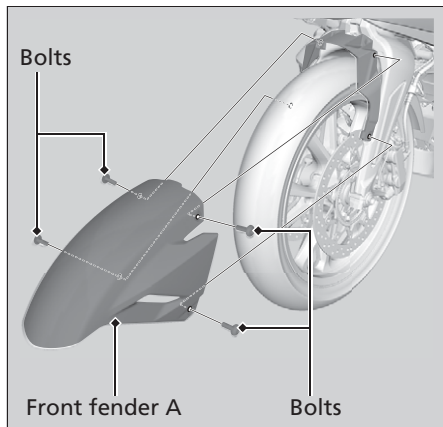

3. Cover both sides of the front wheel and brake calipers with protective tape or cloth.

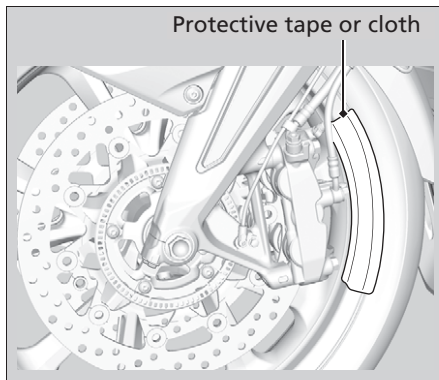

4. Remove the bolt and wheel speed sensor.  
5. On the left side, remove the mounting bolts and remove the brake caliper.

