


(1) MAGNETIC ENGINE STOP SWITCH  
(2) CONNECTORS

**Magnetic engine stop switch inspection**

Disconnect the magnetic engine stop switch connectors. Check the magnetic engine stop switch for continuity. There should be continuity when the magnetic switch top part (magnet) is removed.

Replace the switch if it is out of specification.

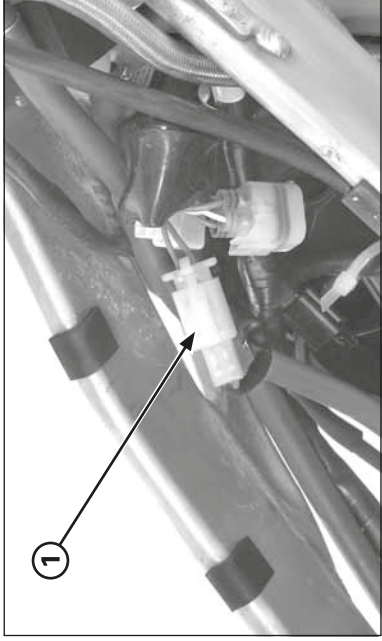


(1) 2P (NATURAL) CONNECTOR

**Cooling fan system inspection**

**Fan motor inspection**

Remove the fuel tank. Disconnect the fan motor 2P (Natural) connector.

Directly connect the 12 V battery to the fan motor 2P (Natural) connector terminals of the fan motor side. The fan motor is correct when the fan motor operate when the 12 V battery is connected. If the fan motor does not operate, replace the fan motor assembly.

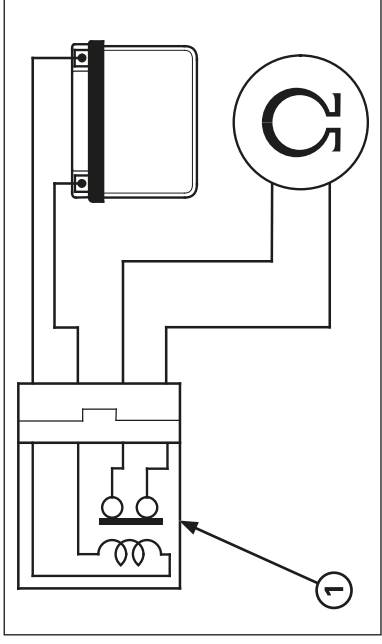

(1) FAN MOTOR RELAY

**Fan motor relay inspection**

Remove the fan motor relay. Connect the ohmmeter to the fan motor relay connector terminals.

**Connection: Red – Blue**

Connect the 12 V battery to the following fan motor relay terminals.

**Connection: Red – Black/Blue**

There should be continuity only when the 12 V battery is connected. If there is no continuity when the 12 V battery is connected, replace the fan motor relay.