

## Right / left side cover

### Removal

1. Remove the seat. ➔ P. 53
2. Remove the bolt located inside the housing.
3. Remove the lower centre pivot bolt on the fastening ring.
4. Remove the side cover, detaching the front and rear tabs.

### Installation

1. Insert the front tab in its slot, followed by the rear tab.
2. Press the centre safety pivot bolt until it clicks in place.
3. Insert the bolt through the inside of the housing.

