










Items		Frequency*1					Refer to page
		× 1,000 mi	0.6	2.5	5	7.5	
		× 1,000 km	1.0	4	8	12	
Emission-Related Items	FUEL LINE			I	I	I	-
	THROTTLE OPERATION			I	I	I	68
	AIR CLEANER *2		Every 10,000 mi (16,000 km): <b>R</b>				48, 57
	CRANKCASE BREATHER *3			C	C	C	69
	SPARK PLUG			I	<b>R</b>	I	70
	VALVE CLEARANCE			I	I	I	-
	ENGINE OIL		Initial = 600 mi (1,000 km) or 1 month: <b>R</b> Regular = Every 2,500 mi (4,000 km) or 6 months: <b>R</b>				54
	ENGINE OIL STRAINER SCREEN					C	-
	ENGINE OIL CENTERIFUGAL FILTER					C	-
	ENGINE IDLE SPEED			I	I	I	-
EVAPORATIVE EMISSION CONTROL SYSTEM					I	-	

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 104).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.