

Display Setting

 
You can adjust the following settings.

- Clock setting
- Changing of speed and mileage unit


If the **SET** button was not pressed during the adjustment, and no buttons were pressed for about 30 seconds, the display will stop flashing automatically and the adjustment will be canceled.

1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 Press and hold the **SEL** and **SET** buttons until the hour digits start flashing.



 - 3 Press the **SEL** button until the desired hour is displayed.
 - ▶ Press and hold the **SEL** button to advance the hour fast.



- 4 Press the **SET** button. The minute digits start flashing.

