 


Instruments *(Continued)*

- 5 Press the **SEL** button until the desired minute is displayed.
 - ▶ Press and hold the **SEL** button to advance the minute fast.

 


- 6 Press the **SET** button. The clock is set, and then the display moves to the changing of the speed and mileage unit. The speed and mileage unit will start flashing.

The adjustment can also be set by turning the ignition switch to the OFF position.

2 Changing of speed and mileage unit:

- 1 Press the **SEL** button to select either "mph" and "mile" or "km/h" and "km".
- 2 Press the **SET** button. The speed and mileage unit is set, and then the display returns to the ordinary display.



The adjustment can also be set by turning the ignition switch to the OFF position.