

## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

### NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the air cleaner case cover by removing the screws.
2. Remove the air cleaner element by removing the screw.
3. Install the new air cleaner element.
  - ▶ Make sure the air cleaner element is installed securely.

**Torque:** 0.8 lbf·ft (1.1 N·m, 0.1 kgf·m)

4. Install the parts in the reverse order of removal.
  - ▶ Make sure the air cleaner case cover is installed securely.

**Torque:** 0.8 lbf·ft (1.1 N·m, 0.1 kgf·m)

